

### 1. Before getting started with IGEPv2 board

- Visit ISEE website:

<http://www.igep.es>

Register and login into IGEP web site.

Download manuals (see next page)

- Hardware Reference Manual
- SDK Software Manual
- Download software (see next page)
  - Virtual Machine SDK Software
  - SW\_Releases

### Useful information

Virtual Machine SDK Software:

- username: *jdoe*
- password: *letmein*

IGEPv2 board poky-linux dist:

- username: *root*
- password: *letmein*
- IP@: *192.168.254.254*

UBUNTU demo microSD:

- username: *jdoe*
- password: *letmein*

### IGEPv2 BOARD Hardware Specification

**Processor** OMAP3530 (ARM Cortex-A8)

**Processor Speed** 720 Mhz

**Memory SDRAM** 512 MBytes LPDDR SDRAM – 200 Mhz

**OneNand Flash** 512 Mbytes

**DSP** TMS320DM64+

**Video 3D Accelerator** PowerVR SGX 530

**Debug Console** RS232 + JTAG Interface

**USB 2.0 LS/FS/HS OTG** 1 Mini AB USB socket connector (dual slave and host role)

**USB 2.0 HS HOST** 1 Type A USB socket connector (standard USB host)

**Audio stereo in/out** 3.5mm standard stereo audio jack  
**microSD** microSD connector (SD and SDHC cards supported)

**DVI video output** DVI-D using HDMI connector. (video and TS lines are available in expansion connector also).

**Wifi** IEEE 802.11b/g 2,4GHz

**Bluetooth** 2.0


**Antenna WiFi/Bluetooth** 1 shared internal antenna (integrated on PCB)

**Ethernet** 10/100 MB BaseT (RJ45 connector with led link/activity)

**PCB size** 93 x 65 x 1.6 mm

**Indicators** 2 Bicolor USER LEDs


**Temperature Range** Industrial range (-40 to +85 °C)

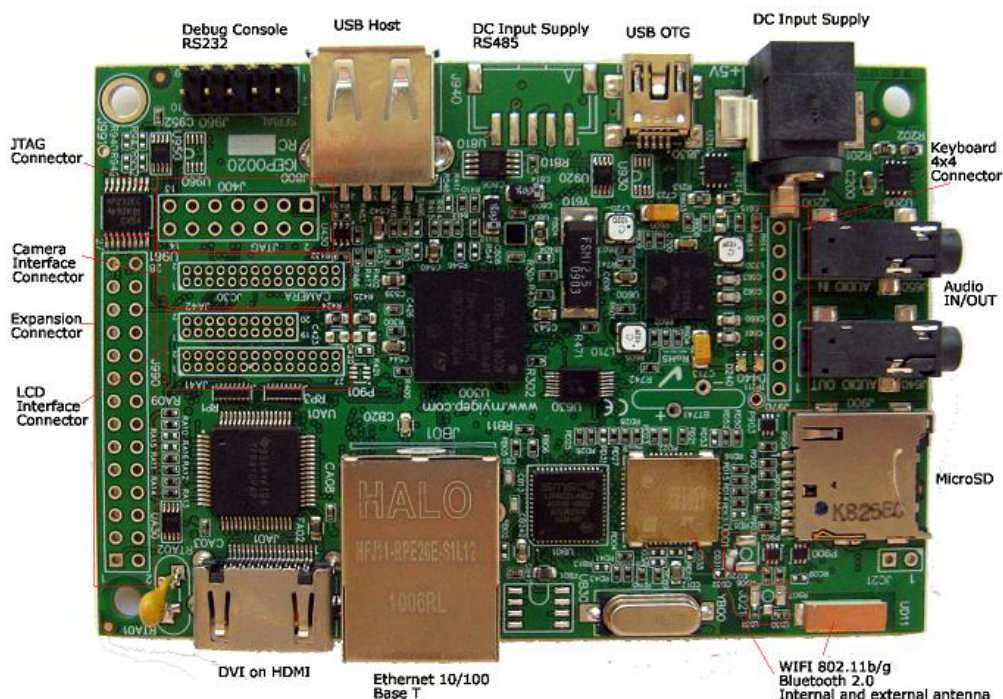

### 1. First of all register and login




### 2. User Menu will appear. Select Downloads option

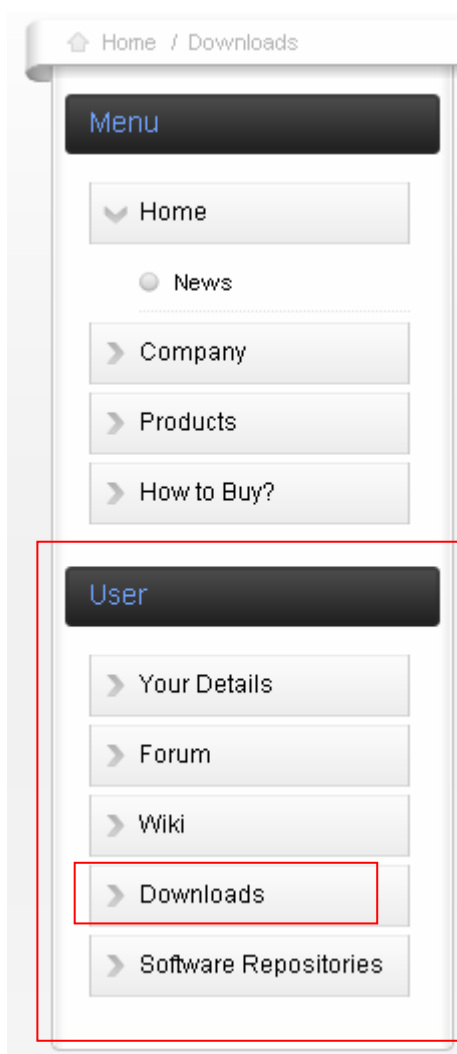

### 3. Choose "01-ISEE\_Products" directory and then "IGEPv2" directory. All information related to IGEPv2 board is located here


#### User Downloads

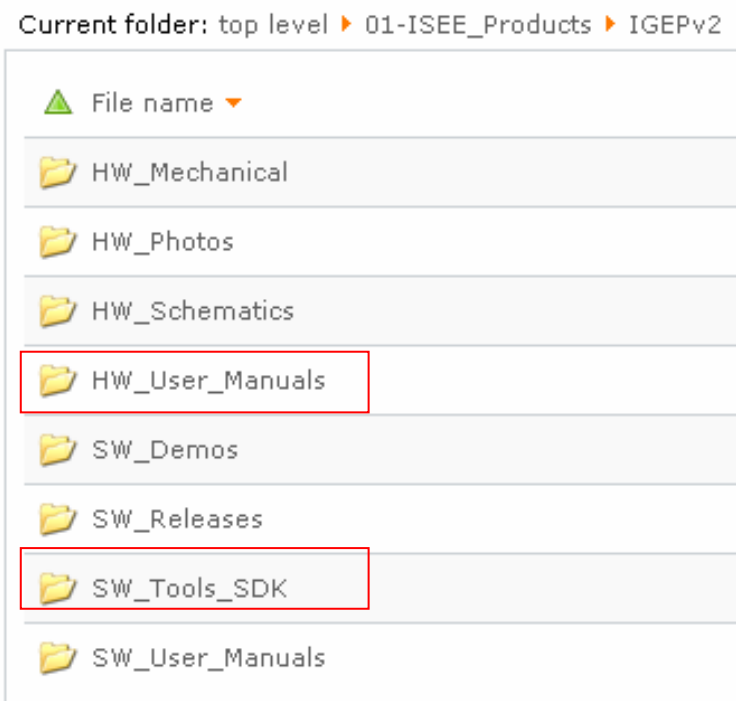

### 4. Hardware Manuals and Virtual Machine SDK are located on "HW\_User\_Manuals" directory and "SW\_Tools\_SDK" directory respectively.

## 2. Getting started with IGEPv2 board

a. You need the following additional components: a TFT with DVI-D connector, a DVI-HDMI cable, a stereo audio cable, a UTP LAN cable, a USB HUB 2.0 a USB keyboard and a USB mouse.

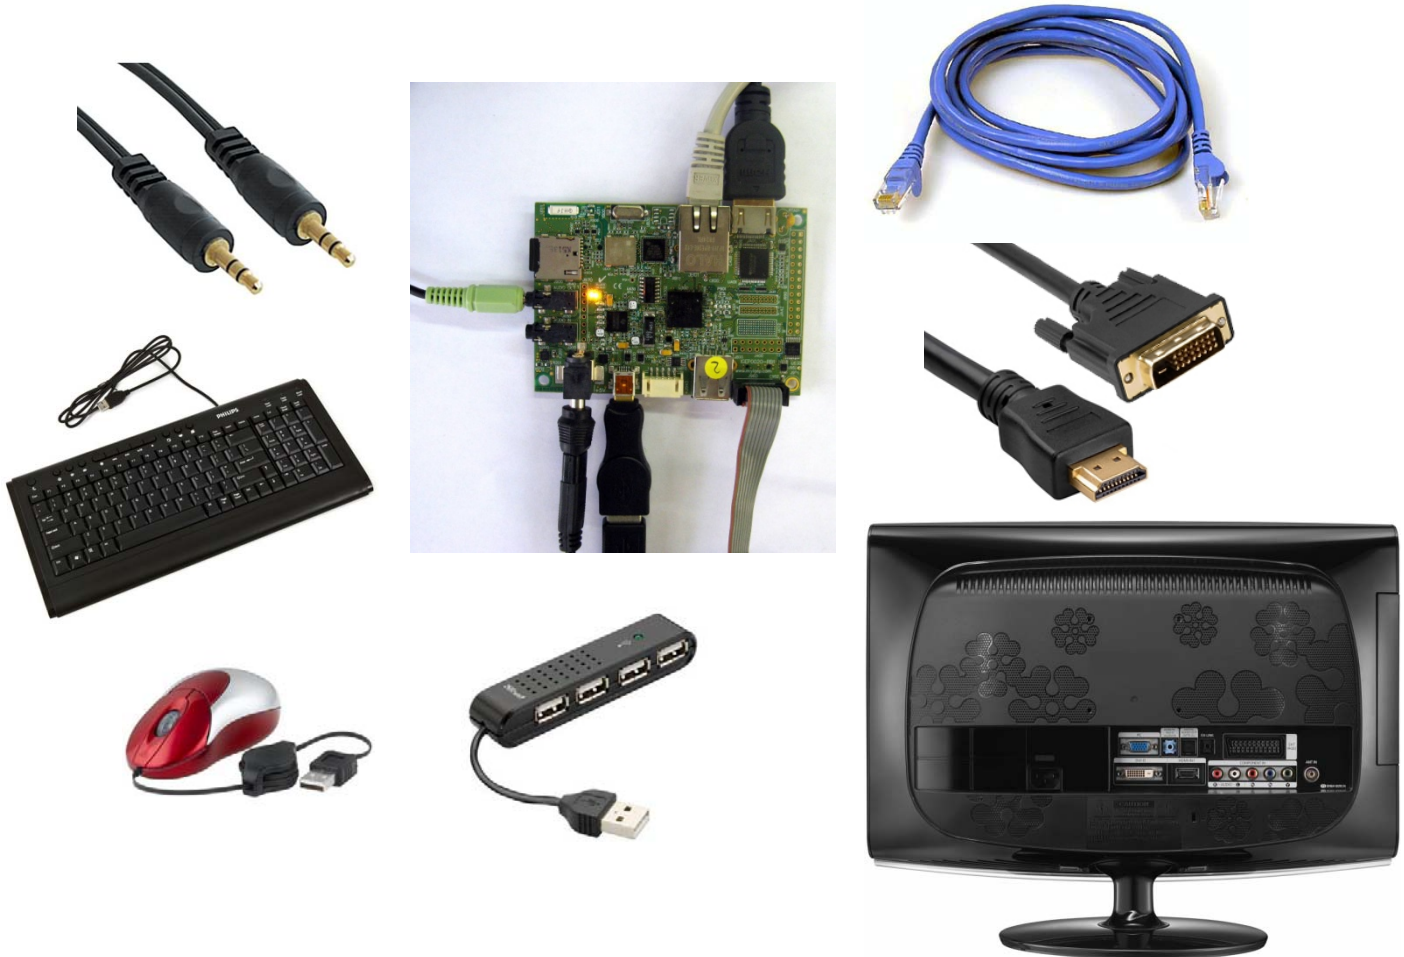

b. Before powering the IGEPv2 board, check that you have plugged in the DVI cable, the USB HUB, the USB keyboard and the USB mouse.



**WARNING: In order to protect the DVI interface, it is better to plug in the DVI cable before powering the IGEPv2 board.**

c. Connect the power supply jack to the IGEPv2 board.



**WARNING: THE IGEPv2 BOARD CAN ONLY BE POWERED WITH 5VDC POWER SUPPLY OR THE BOARD WILL BE DAMAGED!**



For warranty and additional information about IGEPv2 board, please check Hardware Reference Manual on <http://www.igep.es> .